

FLEXT**☆IL**™

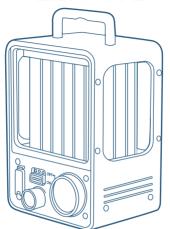

The Guide Of
VILLA LANTERN
Model: ML01

## **OPERATION DIAGRAM**

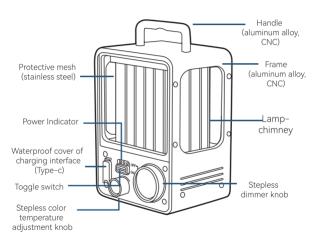

# FLEXTAILGEAR SPECIFICATIONS

Name	VILLA LANTERN		
Series	Camping lantern		
Maximum Illumination Distance	5m		
Maximum Illumination Area	150m²		
Maximum Luminous Flux	600lumens		
Maximum Endurance	72H		
Charging	Type-c		
Battery	3.7V PL103450-2P-4000mAh rechargeable lithium battery (built-in)		
Light Type	Floodlight		
LED	High light efficiency LED lamp		
Working Life	20000H		
Operation Mode	Toggle/knob		
Size	Medium		
Size	80× 130×67 mm (handle included)		
Material	Aluminum alloy + stainless steel +ABS+PC		
Weight	335g (battery included)		

Waterproof Level	IPX5	
Shock Resistance	1m	
Blasting flash	not available	
SOS/Lighthouse mode	not available	
Application	Indoor and outdoor	
Standard Accessories	"VILLA LANTERN (built-in battery) $\times 1$ , Type-C charging cable $\times 1$ , Manual $\times 1$ "	


Output	Specifications		
` <del>`</del>	Maximum	Average	Minimum
.Ϋ́.	600	/	25
( <u>b</u>	4.5	/	72

Note: all test results are measured in accordance with ANSI / NEMA FL 1-2009 standard

## (OPERATION INSTRUCTION)



Power on

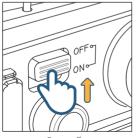


Power off

#### Toggle Switch:

Toggle the switch down to turn on the lantern, and each of the brightness is maintained at 10% of the total brightness, and the color temperature is maintained at 3500K.



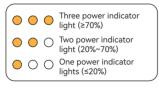


#### Power Indicator:

Togale the switch down to turn on the lantern, then the power indicators light. The number of lights will indicate the remaining battery capacity(Three lights indicate the power is ≥ 70%.Two lights indicate the power is hetween 20%~70% One light indicates the power is  $\leq 20\%$ ): Toggle the switch up to turn off the lantern. the power Indicator will be off.



Turn up the brightness steplessly

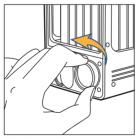


Turn down the brightness steplessly

#### **Stepless Dimmer:**

When the lantern is on, rotate the knob clockwise to turn up the brightness; Rotate the knob counterclockwise to turn down the brightness;

Adjust the lantern to cold color temperature steplessly

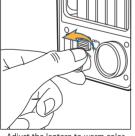


Adjust the lantern to warm color temperature steplessly

### Stepless Color Temperature Adjustment:


When the lantern is on, rotate the knob clockwise to adjust the lantern to the cold color temperature, and rotate the knob counterclockwise to adjust the lantern to the warm color temperature. The color temperature range is between 3500k-4500k.



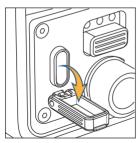

#### Charging:

Open the water-resistant cover, then connect it to the power supply to charge by the type-c cable. After charging, tighten the waterproof cover of the charging interface to prevent unpredictable faults caused by water entering the charging interface.

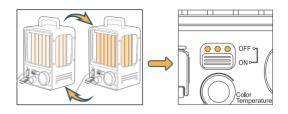

#### Charging indication:

When the lantern is off, connect it to the power supply by the type-c cable, the "breathing" effect of the glimmer in the lampshade indicates the device is in the state of charging. The power Indicators can show the battery level clearly. After the device is fully charged, the "breathing" effect will stop and indicate the device is fully charged. When the lantern is on, connect it to the power supply by the type-c cable, The power Indicators can show the battery level and there is no "breathing" effect of the glimmer in the lampshade.

## AFTER-SALES SERVICE AND GUARANTEE

Warranty period:1 year

#### Warranty Scope:

- 1. The product is within the warranty period;
- 2. Quality problems occurred when the product leaves the factory, such as missing original parts, film surface damage, etc.;

#### Non-Warranty Scope:

- Unable to provide valid proof of original purchase (invoice or formal bill with purchase date and purchase channel);
- Damage caused by unauthorized disassembly, modification, replacement and maintenance of the product without the consent of the manufacturer:
- 3. The product is damaged due to human factors (human scratch, man-made fall, etc.);
- Losses are caused by transportation, accidents or third parties;
- 5. Damage caused by operating methods and

#### Warranty Service:

- Consumers can consult the company or the company's authorized dealers for detailed protection services, after-sales staff will inform consumers of the address and contact information of the nearest dealer;
- 2. If the product is within the scope of quality assurance, after-sales staff will provide quality assurance services according to the specific situation, such as replacement or return of spare parts and other services;
- 3. If there are any problems related to the product, we will solve them for you in the shortest time;

#### Disclaimer:

- 1. FLEXTAILGEAR guarantees that all products have passed the factory inspection. If you believe that the products do have quality problems and are missing, please refuse to sign and receive them and timely contact FLEXTAILGEAR after-sales service for processing, if signed and confirmed no quality defects, FLEXTAILGEAR will not accept;
- 2. Please note that the recommended use method of the product, such as projector lumen and projection environment is for reference only and

cannot be applied to all projection environments.

3. If it is not the quality of the product itself,
FLEXTAILGEAR does not support "no reason to
return" or replace the product, please understand;
4. The Company will not assume any responsibility
for any statements related to products not directly
published by the company.

#### Paid maintenance service:

If you buy a product that goes beyond the three-pack, FLEXTAILGEAR provides you with a paid repair service. If the paid repair process is completed by repairing the faulty parts, FLEXTAILGEAR provides you with a warranty period of 30 natural days upon receipt of the repaired product; If the paid repair process is completed by replacing the faulty parts, FLEXTAILGEAR provides you with a warranty period of 90 natural days after the replacement, and the round-trip freight of the paid repair will be borne by the user.

#### Warm Tips:

 You can get the latest maintenance cost standards through official email and other official channels; If the product parts need to be replaced, the replaced broken parts shall be owned by FLEX-TAILGEAR.

#### THREE GUARANTEES ARE NOT SUPPORTED

#### Returns are not supported:

- Submit the return requirements over the return time;
- 2. Unable to provide purchase documents or invoices, forge or modify the documents;
- 3. Damage due to incomplete replacement of goods / or human error.

#### Returns are not supported:

- 1. After FLEXTAILGEAR internal testing, there is no quality problem in the product itself (only for return users with defective products);
- Goods that affect secondary sales (including but not limited to FLEXTAILGEAR unpacking, serious dirt after use, etc.).

#### Three guarantees of services are not supported:

1. The products that do not meet the provisions of the three Guarantees of services (including but not limited to exceeding the time limit);

- Collision and burning accidents caused by human errors are not product quality problems;
- Modify, refit, repair, brush it by yourself or a third party not authorized by FLEXTAILGEAR;
- Damage caused by repaired by yourself;
- 5. The product malfunction caused by the software fault of the peripherals or accessories not configured by the products used with the product;
- Damage caused by the product not being operated according to the instructions;
- 7. The serial number of the machine, factory labels, and other labels of the product are torn or juggled;
- 8. The product malfunction caused by misuse, collision, drop, negligence, abuse, fluid intake, moisture exposure, accident, modification, incorrect installation or use, and other problems not related to the product itself quality.
- 9. Natural consumption, wear, and aging of consumable materials;
- 10. Lack of accessories, gifts, invoices, or modifications of the product that affect the integrity of the product;
- 11. The broken product caused by the use, maintenance, and storage according to the user instructions;

- 12. Colliding and burning not caused by product quality problems, or broken products caused by unauthorized modification, entering foreign matters (water, oil, sand, etc.), incorrect installation, and failure to use and operate according to the instructions:
- 13. Damage caused by accidents, disasters, and wars
- 14. Other situations that do not conform to the FLEXTAILGEAR after-sales policy.
- 14. Other situations that do not conform to the FLEXTAILGEAR after-sales policy.

#### Service Guidelines:

- 1. Please retain all the accessories of the goods (including but not limited to the internal accessories, gifts, warranty cards, instructions and delivery of the goods Ticket, etc.) when you return and exchange the product. Warm tips: To ensure that your return and exchange can proceed smoothly, please reserve the outer packaging, accessories, and gifts for 30 days from the date you receive them.
- During replacement and maintenance, the goods shall be professionally tested by FLEXTAILGEAR or

FLEXTALL GEAR authorized maintenance center After confirming the fault, the FLEXTAILGEAR company or the authorized repair center will determine the appropriate repair plan. If the product parts need to be replaced, the replaced broken parts shall be owned by FLEXTAILGEAR. 3. Repair and replacement address: Please contact customer service through the official email, the official website, and other official channels. To provide you with better after-sales service, please contact FLEXTAILGEAR customer service for the specified address and recipient before sending goods back for repair or replacement, and provide the corresponding logistics tracking number, so that FLEXTAILGEAR can better track the logistics, and provide after-sales service. If you do not return it under this Treaty, FLEXTAILGEAR will not be liable

- f Facebook : Flextailgear
- Twitter : FLEXTAILGEAR
- Instagram : flextailgear
- Email: service@flextailgear.com
- www.flextailgear.com
- Flextail Technology Co.,Ltd.